

THOMAS & FRIENDS™

TALKING BULSTRODE & WHICH-WAY BRIDGE




Adult assembly required.

INSTRUCTIONS


HWY23

Keep these instructions for future reference as they contain important information.

What's Included

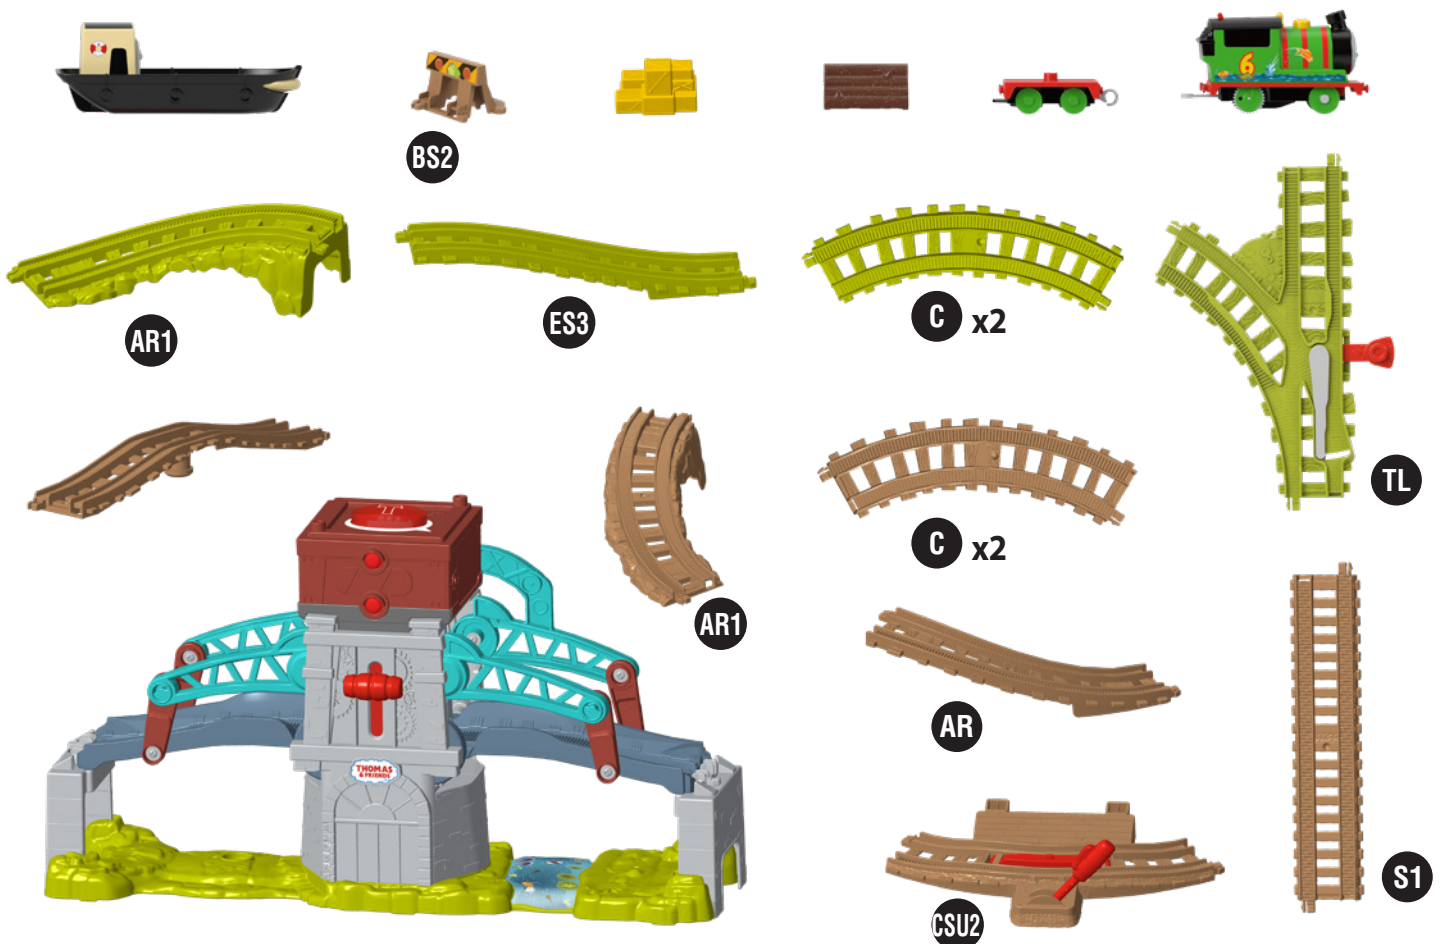


Helpful Hints

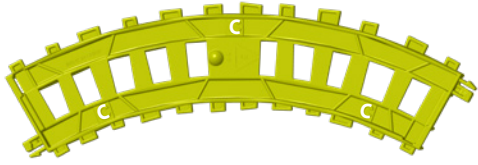

Look for codes on the bottom of each track.

 Some engines may not work on this track set.



This set includes tracks with a bend so that the engine can climb up and travel down!



Assembly steps marked with a star indicate a permanent assembly. Once these parts are assembled, they can't be taken apart.

Assembly



Troubleshooting

PROBLEM	SOLUTION
The light on top of the Which-Way Bridge blinks three times.	When battery power is low, the light on top of the Which-Way Bridge will blink three times. Be sure to replace batteries with two, new AA (LR6) alkaline batteries.
The Which-Way Bridge doesn't talk.	The Which-Way Bridge is in sleep mode (after about five minutes of inactivity) or is paused. Press the button on the top of the Which-Way Bridge, or move the lever to raise or lower the drawbridge to wake it up. Batteries are dead. Replace the batteries with two, new AA (LR6) alkaline batteries
An engine and the Which-Way Bridge do not react to each other.	Only interactive engines (sold separately and subject to availability) will interact with the Which-Way Bridge. Battery power may be low. Replace batteries with two, new AAA (LR03) alkaline batteries for the engine or two, new AA (LR6) batteries for the Which-Way Bridge. The distance between the engine and the Which-Way Bridge is too great. Make sure the engine and the Which-Way Bridge are no further apart than six feet (1,8 meters). The light in the room may be too bright. Try dimming light by closing curtains or turning a light off. The engine enters sleep mode after about five minutes of inactivity. Press the button on the engine to wake it up.
The Which-Way Bridge does not seem to totally turn off.	Press and hold the button on top of the Which-Way Bridge for about three seconds to completely turn off power.
An engine from another set does not work on track in this set.	Some engines from other sets will not fit on this track set. Only interactive engines (sold separately and subject to availability) will interact with the Which-Way Bridge.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



Battery Information

REQUIRES:



- Phillips screwdriver (not included) for battery installation.
- Two AAA (LR03) (not included) and two AA (LR6) alkaline batteries (included).
- Batteries included are for demonstration purposes only. For longer life, use alkaline batteries.

BATTERY INSTALLATION

Access the battery compartment by loosening the screw in the bottom of the engine and separating the top half of the engine from the bottom half of the engine. Install the batteries as indicated inside the battery compartment. Re-assemble the halves of the engine and tighten the screw. If the engine begins to malfunction, first check battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the engine continues to malfunction or no longer operates, it's time to replace the batteries with fresh batteries.

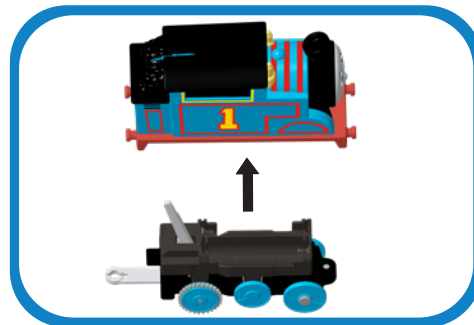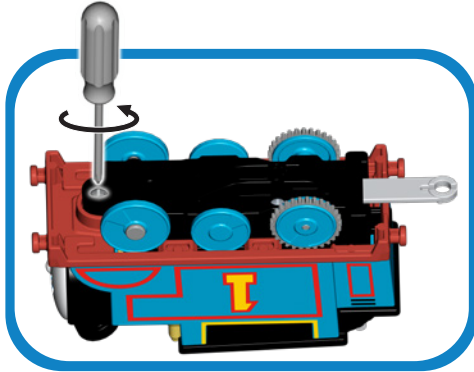

Locate the battery compartment door on the side of the Which-Way Bridge, loosen the screw of the battery compartment door and remove the door. Remove the used batteries and properly dispose of them. Insert new batteries as indicated inside the battery compartment. Replace the battery compartment door and tighten the screw.

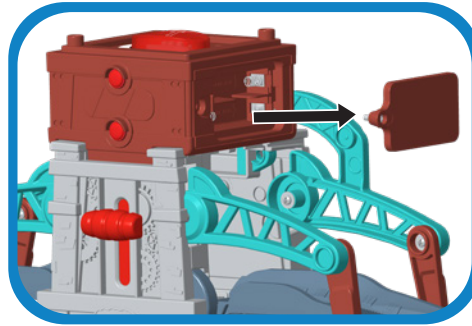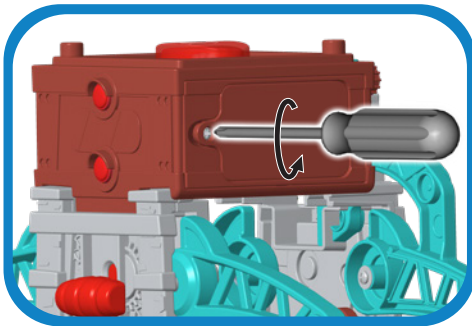

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.


L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

Track Layout

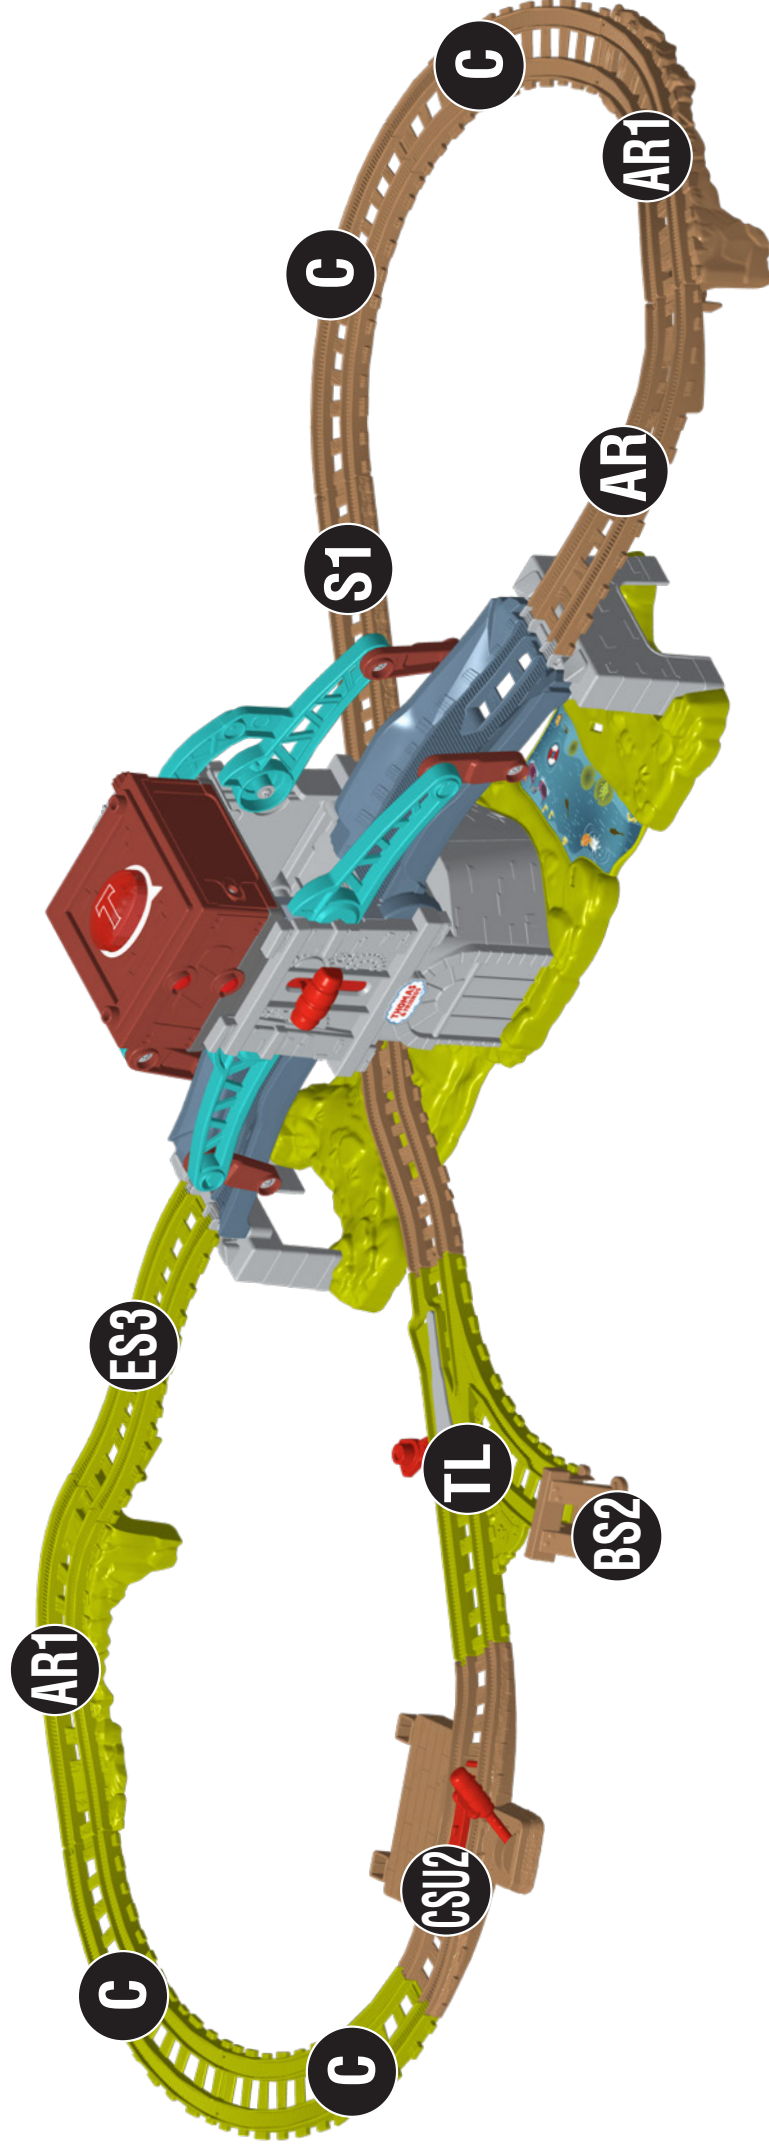


Let's Play!

- 1** Use the switch track to change tracks.

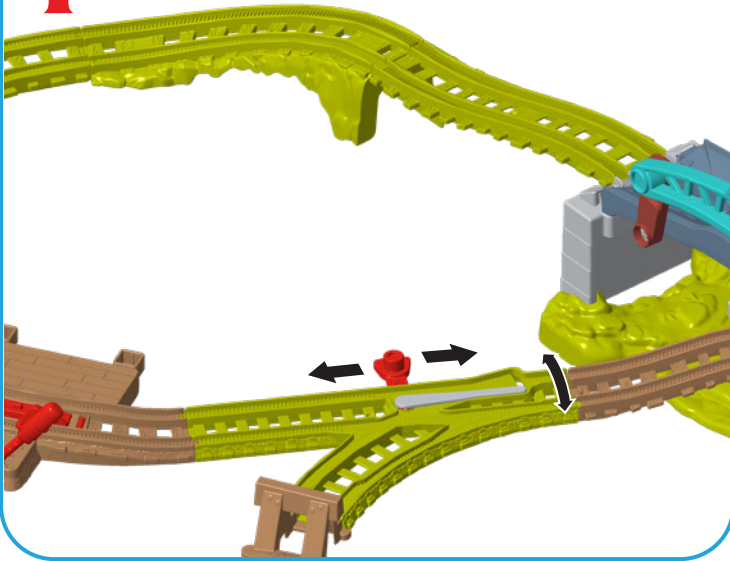

- 2** Set the stop-track to "STOP".

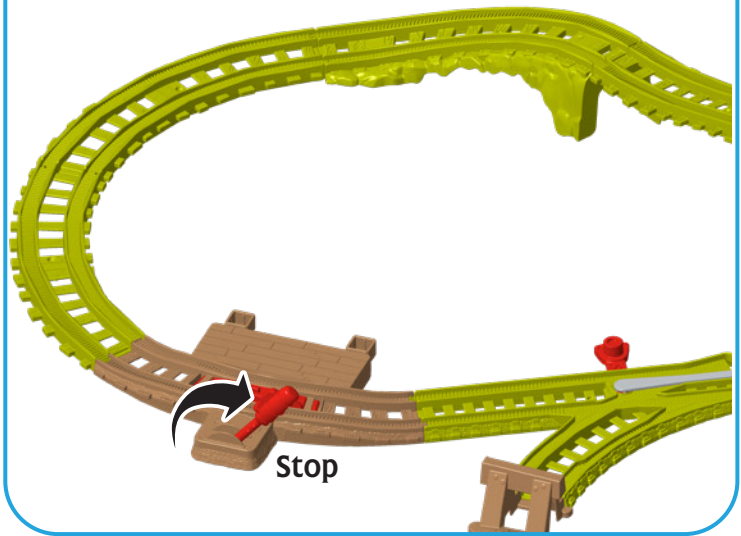


- 3** Pull down the lever to raise the drawbridge. This activates lights and sounds, and the directional flag pops up!




- 4** Push Bulstrode the boat to transfer cargo pieces from the "river" under the Which-Way Bridge to the loading station.



- 5** Place Percy the engine on the track, attach the cargo car with a cargo piece to the engine and slide the switch on back of the engine to turn power on.

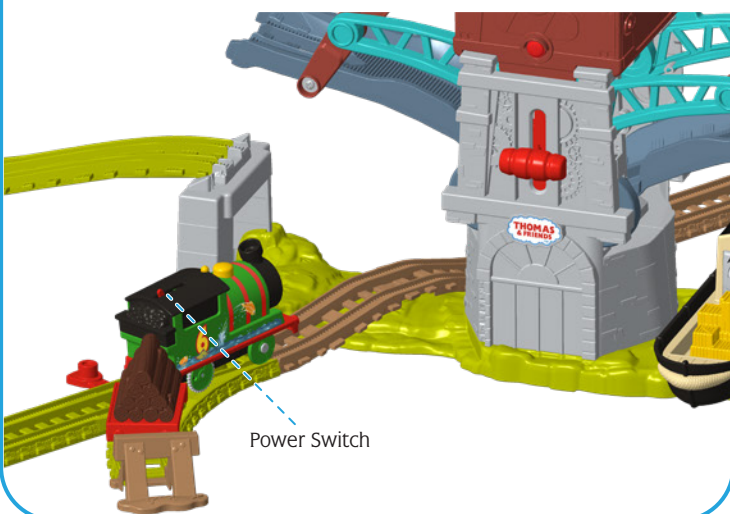


- 6** After the engine passes under the Which-Way Bridge, lift the lever to lower the drawbridge. This activates lights and sounds, and the directional flag disappears.

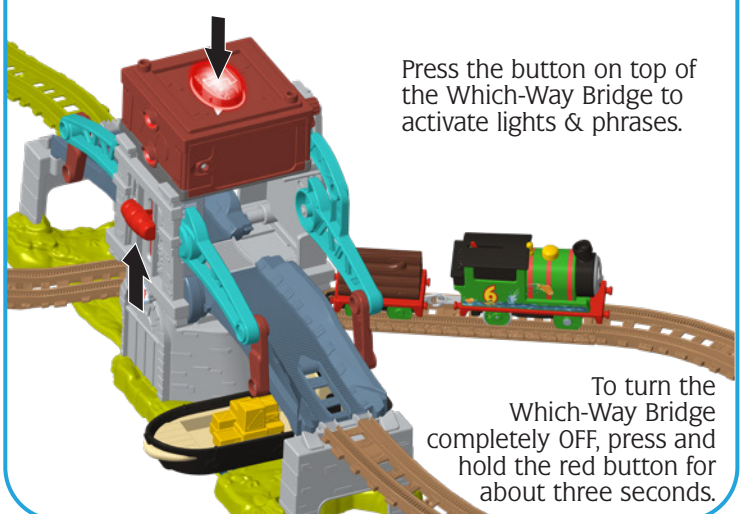


Let's Play!

7 As the engine stops, unload the cargo piece.

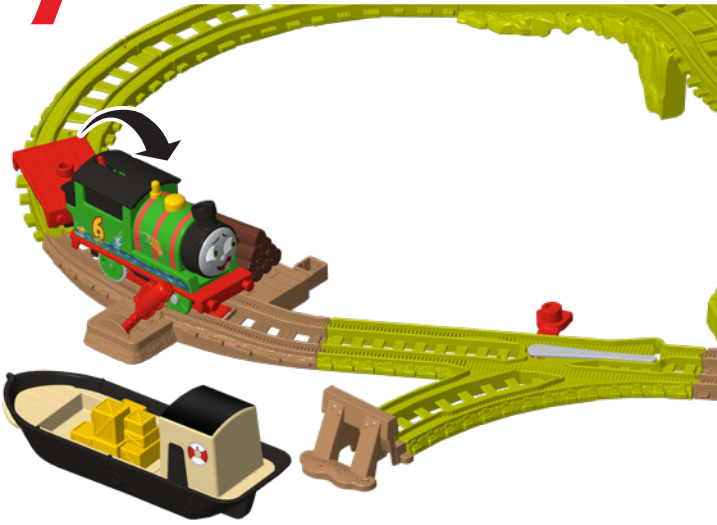

8 Flip the lever to release the engine.

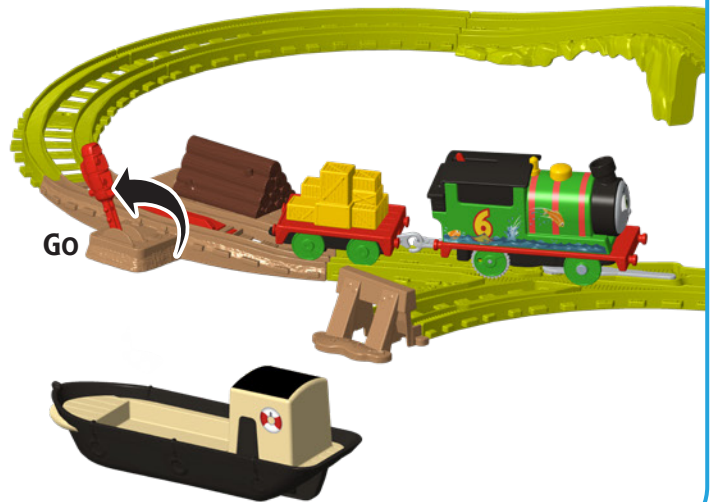

UNITED STATES

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.
Consumer Services/Service à la clientèle : 1-800-432-5437. www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way,
Slough SL1 1FQ, UK. www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.



CREATED BY BRIT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.

©2024 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends™ and Thomas & Friends™ are trademarks of Gullane (Thomas) Limited.

©2024 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2024 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.**



HWY23-0970G1-1103244004-DOM



fisher-price